

bosal

**Инструкция по монтажу
тягово-сцепного устройства
шарового типа 1207 Н
для автомобилей
ВАЗ-2121; - 21213;
- 21214; - 2131**

1977-...
800
75
12,7



« - »:	" (8182) 22-48-15
"	" 8(8442) 98-74-98
"	" 8(343) 379-39-89, 373-42-73
"	" 8(343) 26-88-308
"	" 8(3952) 710-194
"	" 8(495) 777-54-59
"	" 8(495)745-79-11
"	" 8(495) 788-95-97
"	" 8(495) 720-51-03
"	" 8(3532) 57-99-85
"	" 8-905-899-5012
"	" 8(383) 291-59-60
"	" 8(831) 279-53-24
"	" 8(3422) 98-27-20
"	" 8(342) 220-87-87
"	" 8-927-002-90-06
"	" 8(3462) 24-00-44
"	" 8(3842) 21-14-76
"	" 8-902-940-4151
"	" 8(3452) 32-22-12, 41-52-62
"	" 8-961-213-0278
"	" 8-917-347-1700
"	" 8(351) 269-44-75, 900-72-73
"	" 8(3512) 773-76-91

462800,

« - »
18
: (35363) 7-05-06
/ : (35363) 7-13-20
(495) 785-66-07
www.bosal-autoflex.ru

..... :

..... VIN

.....

.....

1. () .

2. , .

3. , .

4. 1000

90 / .

1. « - » 12

8.8 .

2. -

3. -

41.55-2005.

12 40

()

()

Ø10,5


Ø18

L=50

Ø12,5
Ø18

L=50

1			
2			
3			
4			
5			
6			
7			

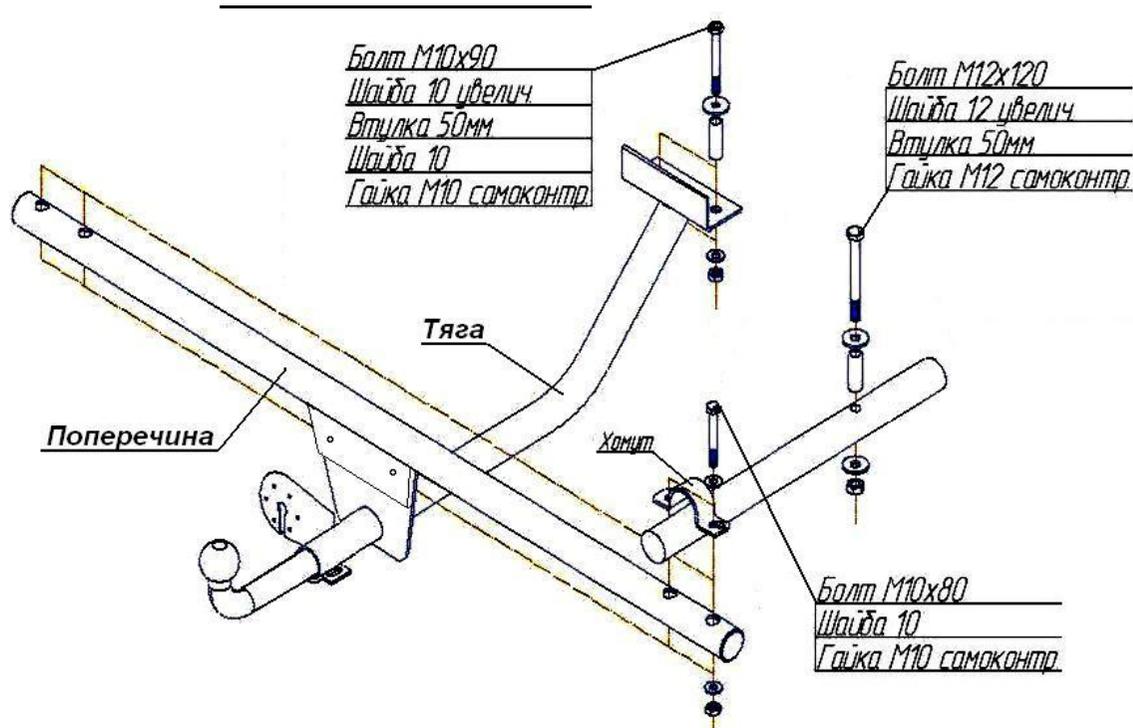

	1
	1
	1
	1

10 /	6
12 /	4
12	4
10	10
12	4
10	2
12 120	2
10 90	2
10 80	4
12 40	2
L = 50	4
	2
	1
	1
130	1
4	3
4	3
4	3
4 35	3
	1

Схема обрезки кабеля

