



**Инструкция
по монтажу тягово-сцепного
устройства шарового типа 3552 А
для автомобилей
Audi Q7**

	2006-...
	1500
	75
	19.3



462800,

« - »
18
: (35363) 7-05-06
/ : (35363) 7-13-20
(495) 799-13-46

www.bosal-autoflex.ru
www.bosal.com

« - »;	" (8182) 22-48-15
"	" 8(8442) 98-74-98
"	" 8(343) 379-39-89, 373-42-73
"	" 8(343) 26-88-308
"	" 8(3952) 710-194
"	" 8(495) 777-54-59
"	" 8(495)745-79-11
"	" 8(495) 788-95-97
"	" 8(495) 720-51-03
"	" 8(3532) 57-99-85
"	" 8-905-899-5012
"	" 8(383) 291-59-60
"	" 8(831) 279-53-24
"	" 8(3422) 98-27-20
"	" 8(342) 220-87-87
"	" 8-927-002-90-06
"	" 8(3462) 24-00-44
"	" 8(3842) 21-14-76
"	" 8-902-940-4151
"	" 8(3452) 32-22-12, 41-52-62
"	" 8-961-213-0278
"	" 8-917-347-1700
"	" 8(351) 269-44-75, 900-72-73
"	" 8(3512) 773-76-91

..... :

..... VIN

.....

.....

1.

(,).

2.

3.

4. 1000

90 / .

1. « - »

12


8.8 .

2.

3.

4.

41.55-2005.

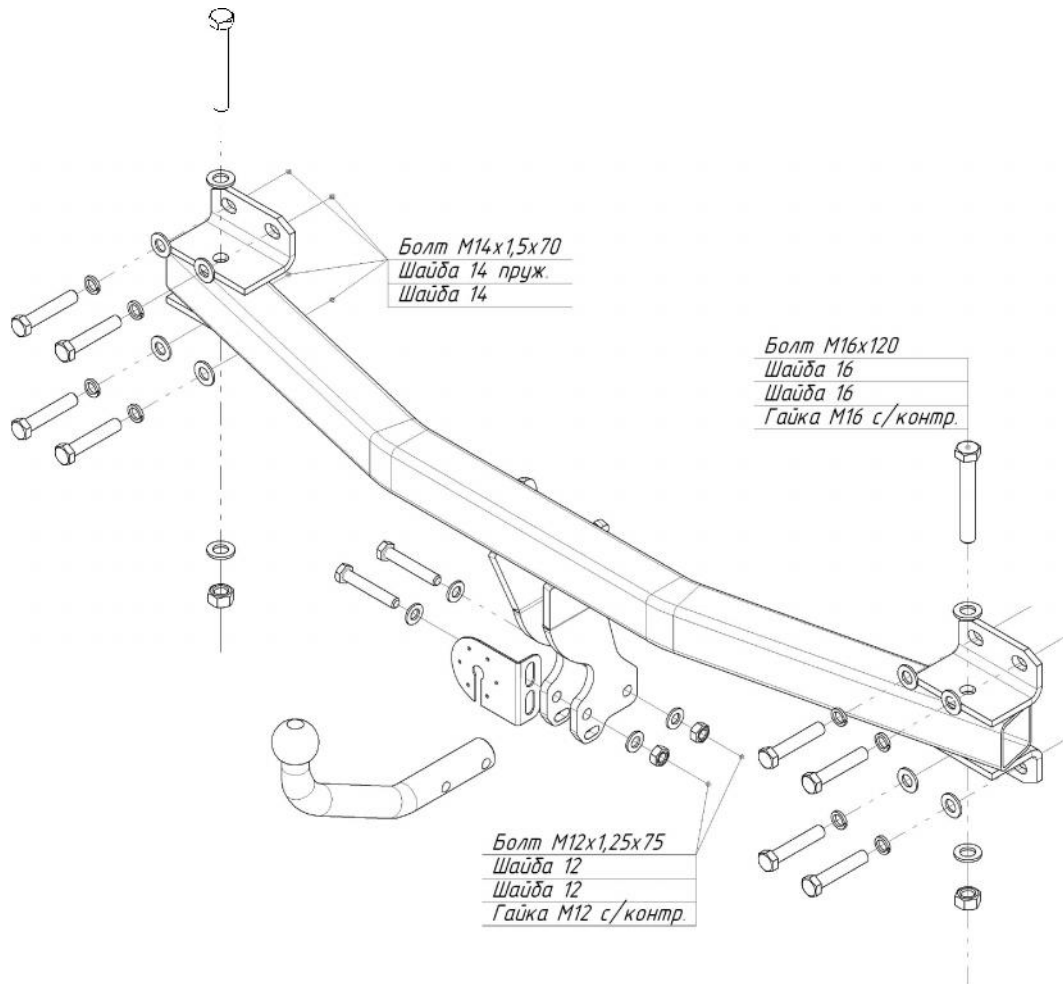

	1 .
	4 .
	1 .
	1 .

12 1,25 80	2 .
16 120	2 .
12 1,25 / .	2 .
16 / .	2 .
12	4 .
14	8 .
16	4 .
14 1,5 70	8 .
14	8 .
VH0807	1 .
	1 .
	1 .
	1 .
	1 .

041-248 (