



**Инструкция  
по монтажу тягово-сцепного  
устройства шарового типа 3806 Н  
для автомобилей  
ГАЗ-3110; -31105  
“Волга”**

	1999-...
	1300
	75
	14,5



462800,

« - »

18



.. (35363) 7-05-06  
/ : (35363) 7-13-20  
(495) 785-66-07  
[www.bosal-autoflex.ru](http://www.bosal-autoflex.ru)

« - »	(8182) 22-48-15
" "	" 8(8442) 98-74-98
" "	" 8(343) 379-39-89, 373-42-73
" "	" 8(343) 26-88-308
" "	" 8(3952) 710-194
" "	" 8(495) 777-54-59
" "	" 8(495)745-79-11
" "	" 8(495) 788-95-97
" "	" 8(495) 720-51-03
" "	" 8(3532) 57-99-85
" "	" 8-905-899-5012
" "	" 8(383) 291-59-60
" "	" 8(831) 279-53-24
" "	" 8(3422) 98-27-20
" "	" 8(342) 220-87-87
" "	" 8-927-002-90-06
" "	" 8(3462) 24-00-44
" "	" 8(3842) 21-14-76
" "	" 8-902-940-4151
" "	" 8(3452) 32-22-12, 41-52-62
" "	" 8-961-213-0278
" "	" 8-917-347-1700
" "	" 8(351) 269-44-75, 900-72-73
" "	" 8(3512) 773-76-91

41.55-2005.

( )  
 « »  
 13 « » « »  
 18 « » « »

L=9

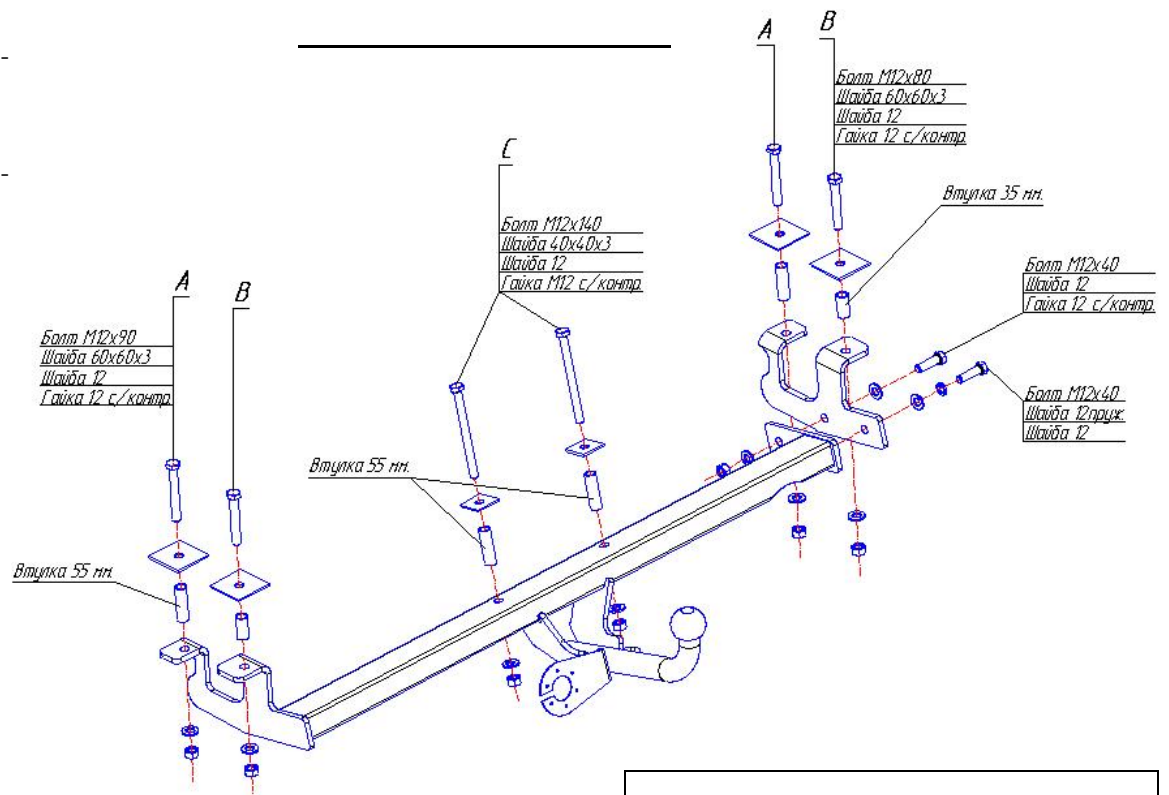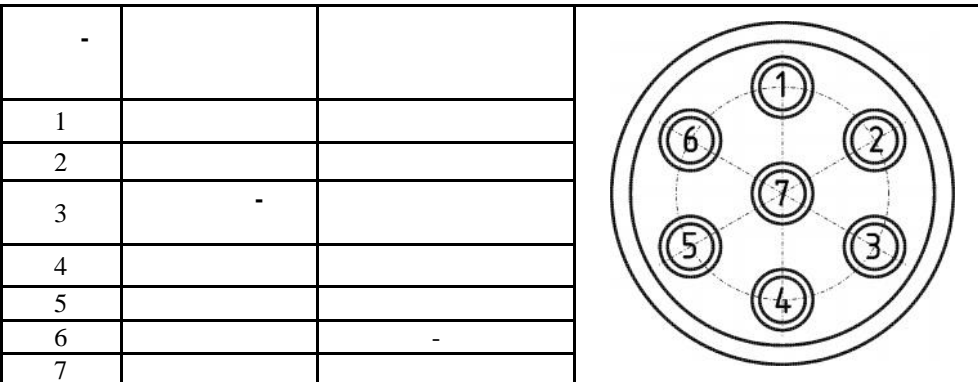

	1 .
	1 .
	1 .
	1 .

		3 .
12 90		2 .
12 140		2 .
12 80		2 .
12 40		2 .
12 /		7 .
12		9 .
12		1 .
12 40 40 3		2 .
12 60 60 3		4 .
L = 9		1 .
L = 35		2 .
L = 55		4 .
		1 .
	130	1 .
		1 .
		1 .

