

bosal

**Инструкция по монтажу
тягово-сцепного устройства
шарового типа 4223 А
для автомобилей
Hyundai Getz, Get (3-5 дв.)**

| | |
|--|----------|
| | 2003-... |
| | 1000 |
| | 50 |
| | 14,9 |



462800,

« - »

18

∴ (35363) 7-05-06

/ : (35363) 7-13-20


(495) 785-66-07

www.bosal-autoflex.ru

« - »
" (8182) 22-48-15
" 8(8442) 98-74-98
" 8(343) 379-39-89, 373-42-73
" 8(343) 26-88-308
" 8(3952) 710-194
" 8(495) 777-54-59
" 8(495)745-79-11
" 8(495) 788-95-97
" 8(495) 720-51-03
" 8(3532) 57-99-85
" 8-905-899-5012
" 8(383) 291-59-60
" 8(831) 279-53-24
" 8(3422) 98-27-20
" 8(342) 220-87-87
" 8-927-002-90-06
" 8(3462) 24-00-44
" 8(3842) 21-14-76
" 8-902-940-4151
" 8(3452) 32-22-12, 41-52-62
" 8-961-213-0278
" 8-917-347-1700
" 8(351) 269-44-75, 900-72-73
" 8(3512) 773-76-91


41.55-2005.

“b”;

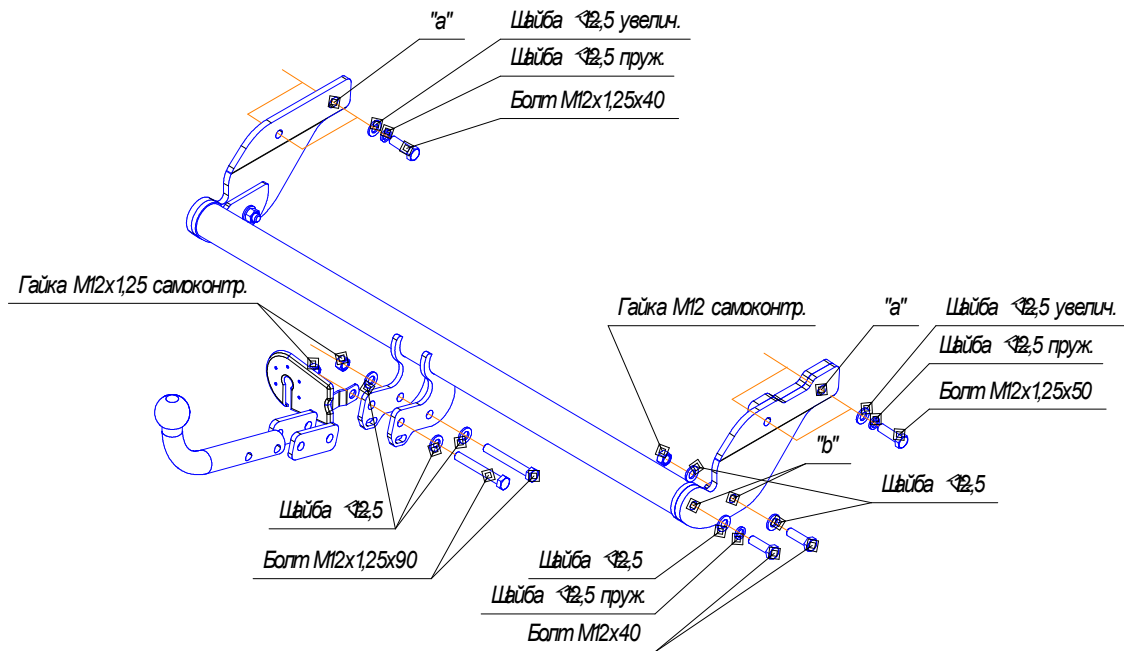

| | | | |
|---|--|--|--|
| | | | |
| 1 | | | |
| 2 | | | |
| 3 | | | |
| 4 | | | |
| 5 | | | |
| 6 | | | |

| | | |
|--|---|---|
| | 1 | . |
| | 1 | . |
| | 1 | . |
| | 1 | . |
| | 1 | . |

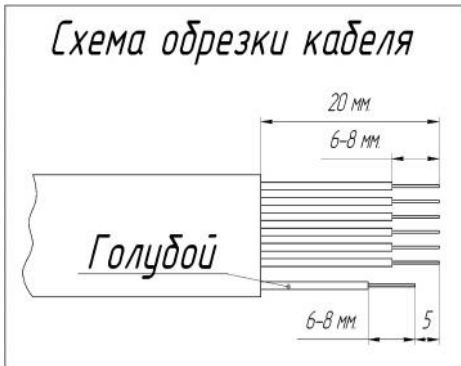

| | | |
|------------|---|---|
| | 3 | . |
| 12 1,25 / | 2 | . |
| 12 / | 2 | . |
| 12 | 9 | . |
| 12 | 6 | . |
| 12 | 4 | . |
| 12 1,25 90 | 2 | . |
| 12 1,25 50 | 2 | . |
| 12 1,25 40 | 2 | . |
| 12 40 | 4 | . |
| | 2 | . |
| VH 0216 | 1 | . |
| | 1 | . |
| | 1 | . |
| 190 | 1 | . |
| | 1 | . |