

1. ()
 2.
 3.
 4. 1000
 , 90 / .
 1. « - » 12
 8.8.
 2.
 3.

bosal

**Инструкция по монтажу
 тягово-сцепного устройства
 шарового типа 4227 А
 для автомобилей
 Hyundai Santa Fe**

	2006-...
	1500
	75
	24

..... :

..... VIN

.....

.....



462800,

« - »
 : (35363) 7-05-06
 / : (35363) 7-13-20
 (495) 785-66-07

www.bosal-autoflex.ru


18

« - »:	" (8182) 22-48-15
"	" 8(8442) 98-74-98
"	" 8(343) 379-39-89, 373-42-73
"	" 8(343) 26-88-308
"	" 8(3952) 710-194
"	" 8(495) 777-54-59
"	" 8(495)745-79-11
"	" 8(495) 788-95-97
"	" 8(495) 720-51-03
"	" 8(3532) 57-99-85
"	" 8-905-899-5012
"	" 8(383) 291-59-60
"	" 8(831) 279-53-24
"	" 8(3422) 98-27-20
"	" 8(342) 220-87-87
"	" 8-927-002-90-06
"	" 8(3462) 24-00-44
"	" 8(3842) 21-14-76
"	" 8-902-940-4151
"	" 8(3452) 32-22-12, 41-52-62
"	" 8-961-213-0278
"	" 8-917-347-1700
"	" 8(351) 269-44-75, 900-72-73
"	" 8(3512) 773-76-91

41.55-2005.

40 175

50 (-) Ø6

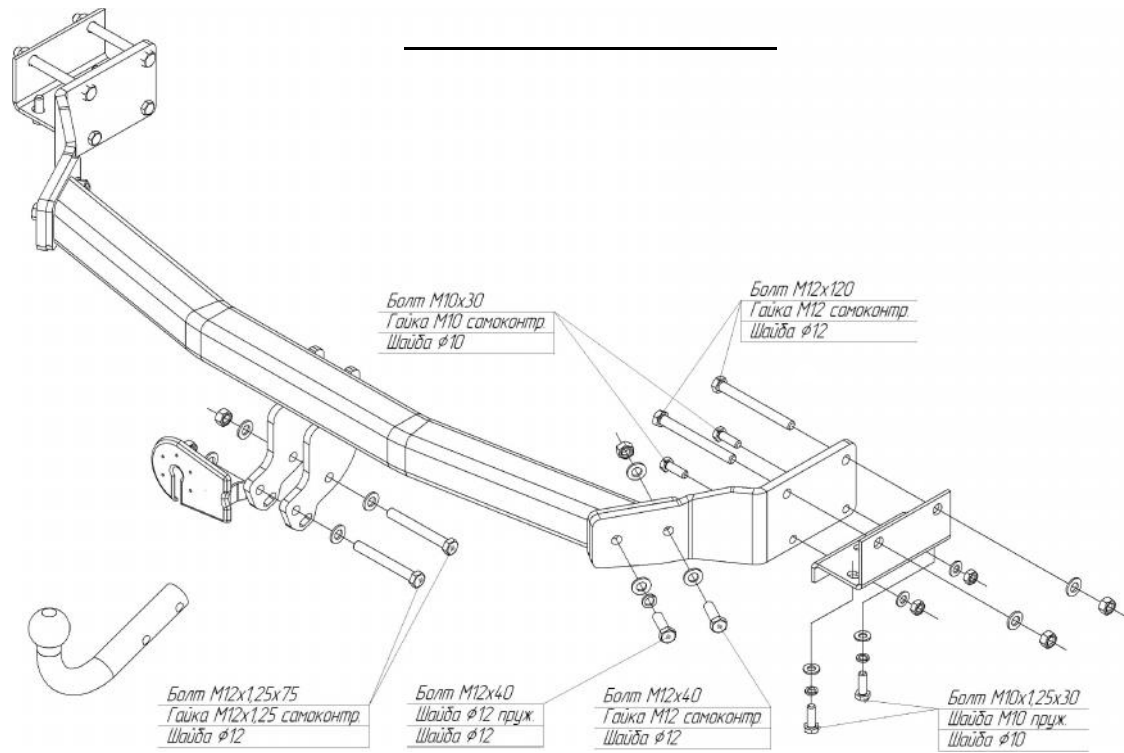

	1 .
	1 .
	1 .
	1 .
	1 .
	1 .

	3 .
12 120	4 .
12 1,25 75	2 .
12 40	4 .
10 1,25 30	4 .
10 30	4 .
12	6 .
12 1,25	2 .
10	4 .
Ø10	4 .
Ø12	2 .
Ø12	14 .
Ø10	8 .
	1 .
	1 .
VH0185	1 .
	1 .
	1 .
130	1 .
	1 .
	1 .
	1 .

