

1.

(), ().

2.

3.

4. 1000

, 90 / .

1. « » ,

12

8.8.

2.

3.

..... :
..... VIN
.....

bosal

**Инструкция по монтажу
тягово-сцепного устройства
шарового типа 4254 А
для автомобилей
Hyundai Solaris
Sedan, HB**

	2010—...
,	1000
,	50
,	14,7



462800,

18

: (35363) 7-05-06
: (35363) 7-13-20
(495) 785-66-07
www.bosal-autoflex.ru

- " " "(8182) 22-48-15
..... " 8(8442) 98-74-98
..... " " 8(343) 379-39-89, 373-42-73
..... " " 8(343) 26-88-308
..... " " 8(3952) 710-194
..... " " 8(495) 777-54-59
..... " " 8(495) 745-79-11
..... " " 8(495) 788-95-97
..... " " 8(495) 720-51-03
..... " " 8(3532) 57-99-85
..... " " 8-905-899-5012
..... " " 8(383) 291-59-60
..... " " 8(831) 279-53-24
..... 8(3422) 98-27-20
..... " " 8(342) 220-87-87
..... " 8-927-002-90-06
..... " " 8(3462) 24-00-44
..... " " 8(3842) 21-14-76
..... " " 8-902-940-4151
..... 8(3452) 32-22-12, 41-52-62
..... 8-961-213-0278
..... " 8-917-347-1700
..... " 8(351) 269-44-75, 900-72-73
..... " 8(3512) 773-76-91



41.55-2005.

« » 12 1,25 40.


« » « » (.) : 12—79Nm .

6 20.

1		
2		
3		
4		
5		
6		
7		

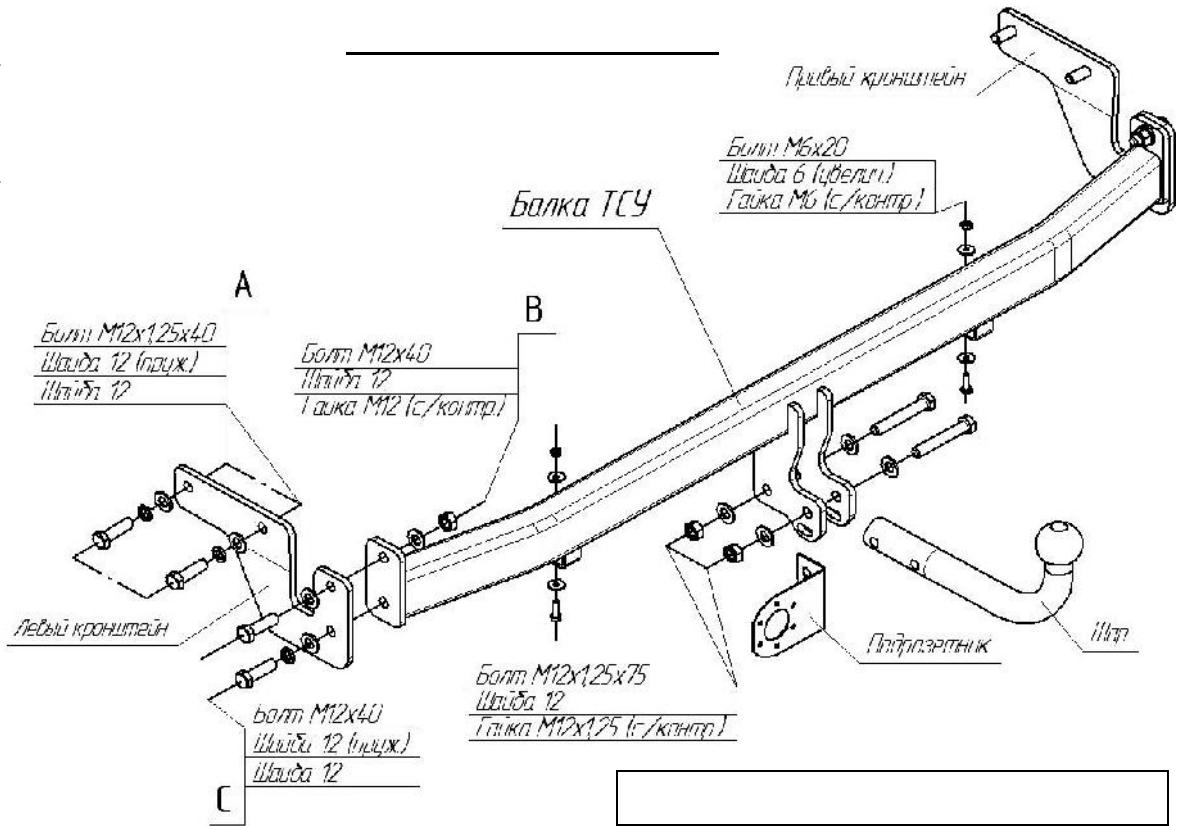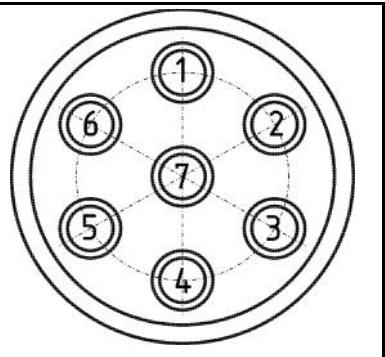

	1 .
	1 .
	1 .
	1 .
	1 .

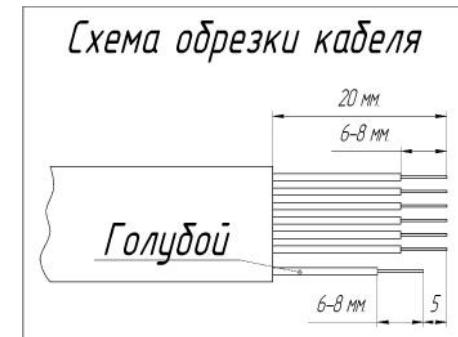

4	3 .
4	3 .
4	3 .
4 35	3 .
12 1,25 75	2 .
12 40	4 .
12 1,25 40	4 .
12 / .	2 .
12 1,25 / .	2 .
12 .	6 .
12	14 .
6 20	2 .
6 / .	2 .
6 .	4 .
VH 0840	1 .
	1 .
	1 .
	1 .
190	1 .
	1 .
	1 .