

# bosal

## Инструкция по монтажу тягово-сцепного устройства шарового типа 8010 А для автомобилей Infinity FX35

	2003 -...
	1500
	50
	21



462800,

18


т. (35363) 7-05-06  
ф. (35363) 7-13-20  
(495) 799-13-46  
www.bosal-autoflex.ru  
www.bosal.com

« - - »	(8182) 22-48-15
" - - "	8(8442) 98-74-98
" - - "	8(343) 379-39-89, 373-42-73
" - - "	8(343) 26-88-308
" - - "	8(3952) 710-194
" - - "	8(495) 777-54-59
" - - "	8(495) 745-79-11
" - - "	8(495) 788-95-97
" - - "	8(495) 720-51-03
" - - "	8(3532) 57-99-85
" - - "	8-905-899-5012
" - - "	8(383) 291-59-60
" - - "	8(831) 279-53-24
" - - "	8(3422) 98-27-20
" - - "	8(342) 220-87-87
" - - "	8-927-002-90-06
" - - "	8(3462) 24-00-44
" - - "	8(3842) 21-14-76
" - - "	8-902-940-4151
" - - "	8(3452) 32-22-12, 41-52-62
" - - "	8-961-213-0278
" - - "	8-917-347-1700
" - - "	8(351) 269-44-75, 900-72-73
" - - "	8(3512) 773-76-91

41.55-2005.

( . . 1)


2

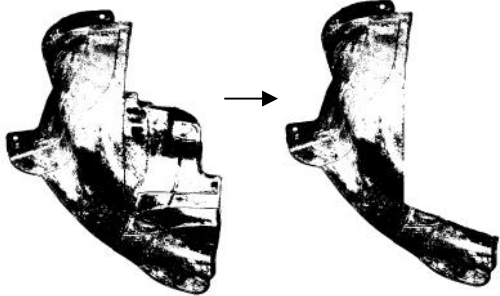

. 1

. 2


1			
2			
3			
4			
5			
6			
7			

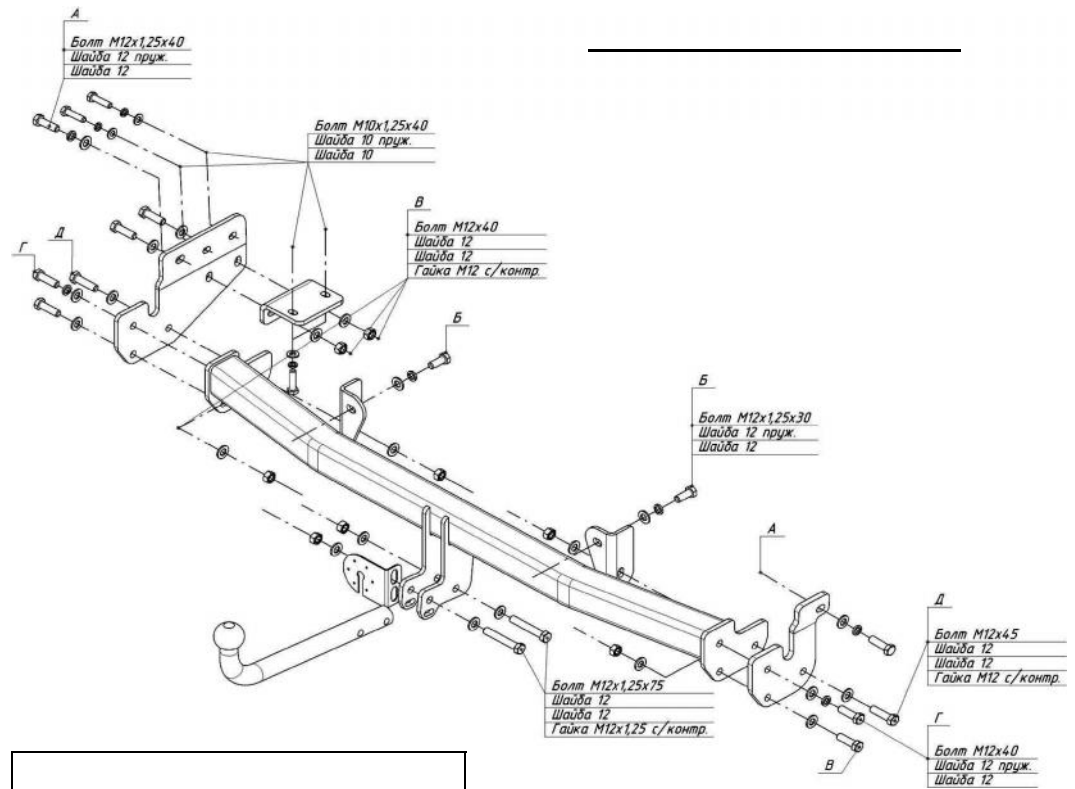

	1 .
	1 .
	1 .
	1 .
	1 .

	1 .
	1 .
	1 .

Схема обрезки кабеля

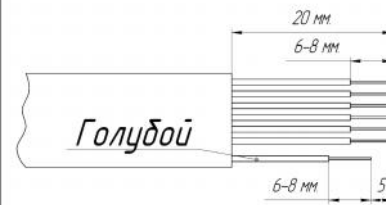

10	1,25	40	4 .
12	1,25	30	2 .
12	40		6 .
12	1,25	40	2 .
12	45		2 .
12	1,25	75	2 .
12	/		6 .
12	1,25	/	2 .
10			4 .
12			6 .
10			4 .
12			22 .
4	35		3 .
4			3 .
4			3 .
4			3 .
			1 .
		190	1 .
VH0864			1 .
			1 .
			1 .